QUICK CHARGE KIT

KIT DE CHARGEMENT RAPIDE

KIT CARGA & JUEGA RÁPIDA

0106 Part Number: X11-43317-01

Xbox 360 Quick Charge Kit

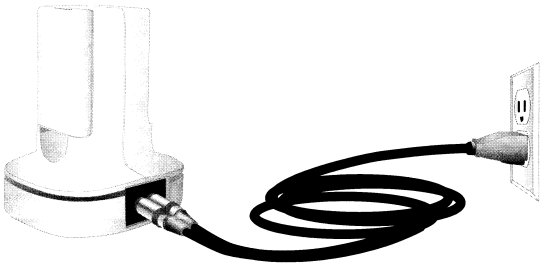

Thanks for choosing the Xbox 360 Quick Charge Kit. Your Quick Charge Kit lets you quickly recharge your Xbox 360 rechargeable battery packs. It is for use exclusively with the Xbox 360 Rechargeable Battery Pack for the Xbox 360™ video game and entertainment system. The Quick Charge Kit contains a charger, a power cord, and a NiMH rechargeable battery pack.

⚠ WARNING
Before using this product, read this manual and the Xbox 360 console manuals for important safety and health information. Keep all manuals for future reference. For replacement manuals, go to www.xbox.com/support or call Xbox Customer Support (see "If You Need More Help").

The limited warranty covering this product is contained in the Xbox 360 Warranty manual (Volume 2).

Dispose of this product in accordance with local and national disposal regulations (if any), including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

⚠ Rechargeable Battery Safety
Only use Microsoft approved rechargeable battery packs, identified by the Xbox 360 Compatible logo, with your wireless controller and quick charge kit. Use of unapproved battery packs may result in injury from burns, fire, or explosion.

Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed. To reduce the risk of injury:

- Charge only with the Xbox 360 quick charger, the Xbox 360 Play & Charge Kit, or another Microsoft approved charger.
- Keep batteries out of reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- If a battery leaks, remove the battery, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.
- Recycle or dispose of batteries in accordance with Local and National Disposal Regulations, including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

Do not allow metal objects to touch the battery terminals; they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.

⚠ Electrical Safety
As with many other electrical devices, failure to take the following precautions can result in serious injury or death from electric shock or fire or damage to the quick charger.

Select an appropriate power source for your quick charger:

- Use only the power cord that came with your quick charge kit or that you received from an authorized repair center.
- Do not use non-standard power sources, such as generators or inverters, even if the voltage and frequency appear acceptable. Only use AC power provided by a standard wall outlet.

To avoid damaging the power cord:

- Protect the power cord from being walked on.
- Protect the cord from being pinched or sharply bent, particularly where it connects to the power outlet and the quick charger.
- Do not jerk, knot, sharply bend, or otherwise abuse the power cord.
- Do not expose the power cord to sources of heat.
- Keep children and pets away from the power cord. Do not allow them to bite or chew on it.
- When disconnecting the power cord, pull on the plug — do not pull on the cord.

If the power cord becomes damaged in any way, stop using it immediately and contact Xbox Customer Support for a replacement.

Unplug your quick charger during lightning storms or when unused for long periods of time.

Connect the power cord by completely inserting the power cord connector into the charger until it stops.

USE YOUR QUICK CHARGE KIT

Charge the Battery Pack
Charge your Xbox 360 Rechargeable Battery Pack before first use and whenever it is depleted.

To charge the battery pack using the quick charger:

1. Insert the rechargeable battery pack into either battery compartment on the quick charger and push in to lock.

   NOTE
   To avoid pinching your fingers when inserting, push only on the flat surface of the battery pack.
2. Connect the quick charger to power with the quick charger power cord.
   The corresponding light on the quick charger will glow red as your battery pack charges. When the light switches to green, the battery pack is fully charged and can be removed for use with your wireless controller.

NOTES

- Do not touch quick charger or battery pack terminals with your fingers or allow metal parts to touch them. Doing so may damage them.
- Typically, fully charging can take up to two hours for one new battery pack or four hours for two new battery packs using the Xbox 360 Quick Charge Kit. Actual charge times vary depending on the state or condition of the battery pack being charged.
- The battery or the charger may become warm during charging or use. This is normal and does not indicate a problem with the battery.
- If the battery is unused for a long time, it may lose its charge. If this occurs, simply recharge the battery normally.
- At first, or after storage for a long period of time, it can take from three to five full charge cycles for the battery pack to achieve its full capacity.
- The battery has a limited life. The amount of play time will decrease as the battery pack ages or after many recharge cycles. The battery pack needs to be replaced when play time becomes too short or when it can no longer be charged.

Clean Your Battery Pack
If it is necessary to clean the battery contacts, use only a dry cloth. Water or chemicals can damage the contacts.

TROUBLESHOOTING

If you encounter problems, try the possible solutions provided below.

Charge Light Doesn't Glow
Make sure the battery pack is completely locked in to the charger battery compartment. If the battery pack is completely locked in to the compartment and the light does not glow green or red, the battery pack or charger may be defective.

NOTE
Damaged battery packs will not charge and could harm your controller. Battery packs that have been crushed, immersed in liquids, or exposed to intense heat may be damaged beyond use and should be disposed of in accordance with local laws.

Battery Pack Charges Slowly
Very depleted rechargeable battery packs can take longer to charge.

Battery Pack Charge Depletes Quickly
The amount of play time will decrease as the battery pack ages or after many recharge cycles. The battery pack should be replaced when play time becomes unacceptably short or when it can no longer be charged.

IF YOU NEED MORE HELP

Please go to www.xbox.com/support or call Xbox Customer Support:
United States and Canada: 1-800-4MY-XBOX (1-800-469-9269)
TTY users: 1-866-740-XBOX (1-866-742-9269)
Mexico: 001-866-745-83-12
TTY users: 001-886-251-26-21
Colombia: 01-800-912-1830

Do not take your Xbox 360 console or its accessories to your retailer for repair or service unless instructed to do so by an Xbox Customer Support representative.

⚠ Do Not Attempt Repairs
Do not attempt to take apart, service, or modify the Xbox 360 console, power supply, or its accessories in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and it will void your warranty.

FOR CUSTOMERS IN THE UNITED STATES

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Trade Name:	Microsoft Corp.	**Responsible Party:**	Microsoft Corporation
Address:	One Microsoft Way Redmond, WA 98052 U.S.A.	**Telephone No.:**	(800) 4MY-XBOX

FOR CUSTOMERS IN CANADA

This Class B digital apparatus complies with Canadian ICES-003.

COPYRIGHT

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, e-mail address, logo, person, place or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.
Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.
© 2006 Microsoft Corporation. All rights reserved.
Microsoft, Xbox, Xbox 360, Xbox Live, the Xbox logos, and the Xbox Live logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Kit de chargement rapide Xbox 360

Merci d'avoir choisi le Kit de chargement rapide Xbox 360. Ce kit de chargement rapide vous permet de recharger rapidement vos batteries rechargeables Xbox 360. Il fonctionne exclusivement avec la Batterie rechargeable Xbox 360 du système de jeu vidéo et de divertissement Xbox 360™. Le kit de chargement rapide comprend un chargeur, un cordon d'alimentation et une batterie NiMH rechargeable.

⚠ AVERTISSEMENT
Avant d'utiliser ce produit, lisez le présent guide et les guides de la console Xbox 360 pour obtenir toute l'information relative à la sécurité et à la santé. Conservez tous les guides pour consultation ultérieure. Pour obtenir des guides de rechange, rendez-vous sur www.xbox.com/support ou composez le numéro du Service à la clientèle de Xbox (voir la section « Si vous avez besoin d'une aide supplémentaire »).

La garantie limitée couvrant ce produit se trouve dans le Guide de garantie de Xbox 360 (Volume 2).

Éliminez ce produit conformément aux normes locales et nationales en matière de gestion des déchets (s'il y a lieu), y compris celles qui régissent la récupération et le recyclage des rebuts de matériel électrique et électronique.

⚠ CONSIGNES DE SÉCURITÉ POUR LA BATTERIE RECHARGEABLE
Utilisez uniquement des batteries rechargeables approuvées par Microsoft, identifiées par le logo de compatibilité avec Xbox 360, avec votre manette sans fil et votre kit de chargement rapide. L'utilisation de batteries non approuvées présente des risques de blessures découlant de brûlures, d'incendie ou d'explosion.

Une utilisation inappropriée des piles risque de provoquer une fuite de liquide, surchauffe ou explosion. Le liquide de pile est corrosif, voire toxique. Il peut provoquer des brûlures aux yeux ou à la peau et est nocif s'il est avalé. Pour réduire le risque de blessure :

- Utilisez exclusivement le chargeur rapide Xbox 360, le Kit de chargement rapide Xbox 360 ou tout autre chargeur approuvé par Microsoft.
- Gardez les piles hors de la portée des enfants.
- Vous ne devez jamais chauffer, ouvrir, perforer ou mutiler les piles ni les jeter dans un feu.
- En cas de fuite, retirez la pile immédiatement en prenant soin d'éviter tout contact avec la peau ou les vêtements. Si le liquide de la pile entre en contact avec la peau ou les vêtements, rincez immédiatement la peau à eau vive. Avant d'insérer une nouvelle pile, nettoyez à fond la manette à l'aide d'une serviette de papier humidifiée.
- Recyclez ou jetez les piles conformément aux normes locales et nationales en matière de gestion des déchets, y compris celles qui régissent la récupération et le recyclage des rebuts de matériel électrique et électronique.

Assurez-vous qu'aucun objet métallique ne touche les bornes de la batterie; elles risqueraient de s'échauffer et de causer des brûlures. Par exemple, ne transportez pas la batterie dans une poche avec des clés ou des pièces de monnaie.

⚠ SÉCURITÉ CONCERNANT L'ÉLECTRICITÉ
Comme dans le cas de nombreux autres appareils électroniques, si vous ne prenez pas les précautions suivantes, vous risquez de subir des blessures graves ou de décéder des suites d'une commotion ou d'un incendie électrique. Vous pourriez également endommager votre chargeur rapide.

Sélectionnez une source d'alimentation appropriée pour votre chargeur rapide :

- N'utilisez que le cordon d'alimentation fourni avec votre kit de chargement rapide ou obtenu auprès d'un centre de réparation autorisé.
- N'utilisez pas des sources d'alimentation non standard, telles que des génératrices ou des onduleurs, même si la tension et la fréquence semblent acceptables. N'utilisez que du courant alternatif fournit par une prise murale standard.

Pour éviter d'endommager le cordon d'alimentation :

- Protégez le cordon d'alimentation pour éviter qu'il ne soit piétiné.
- Protégez le cordon pour éviter qu'il ne soit pincé ou plié, particulièrement aux endroits où il se connecte à la prise de courant et au chargeur rapide.
- Évitez de tirer d'un coup sec sur le cordon d'alimentation, de le nouer, de le plier en deux et de l'abîmer.